


8 7 6 5 4 3 2 1


F  
E  
D  
C  
B  
A

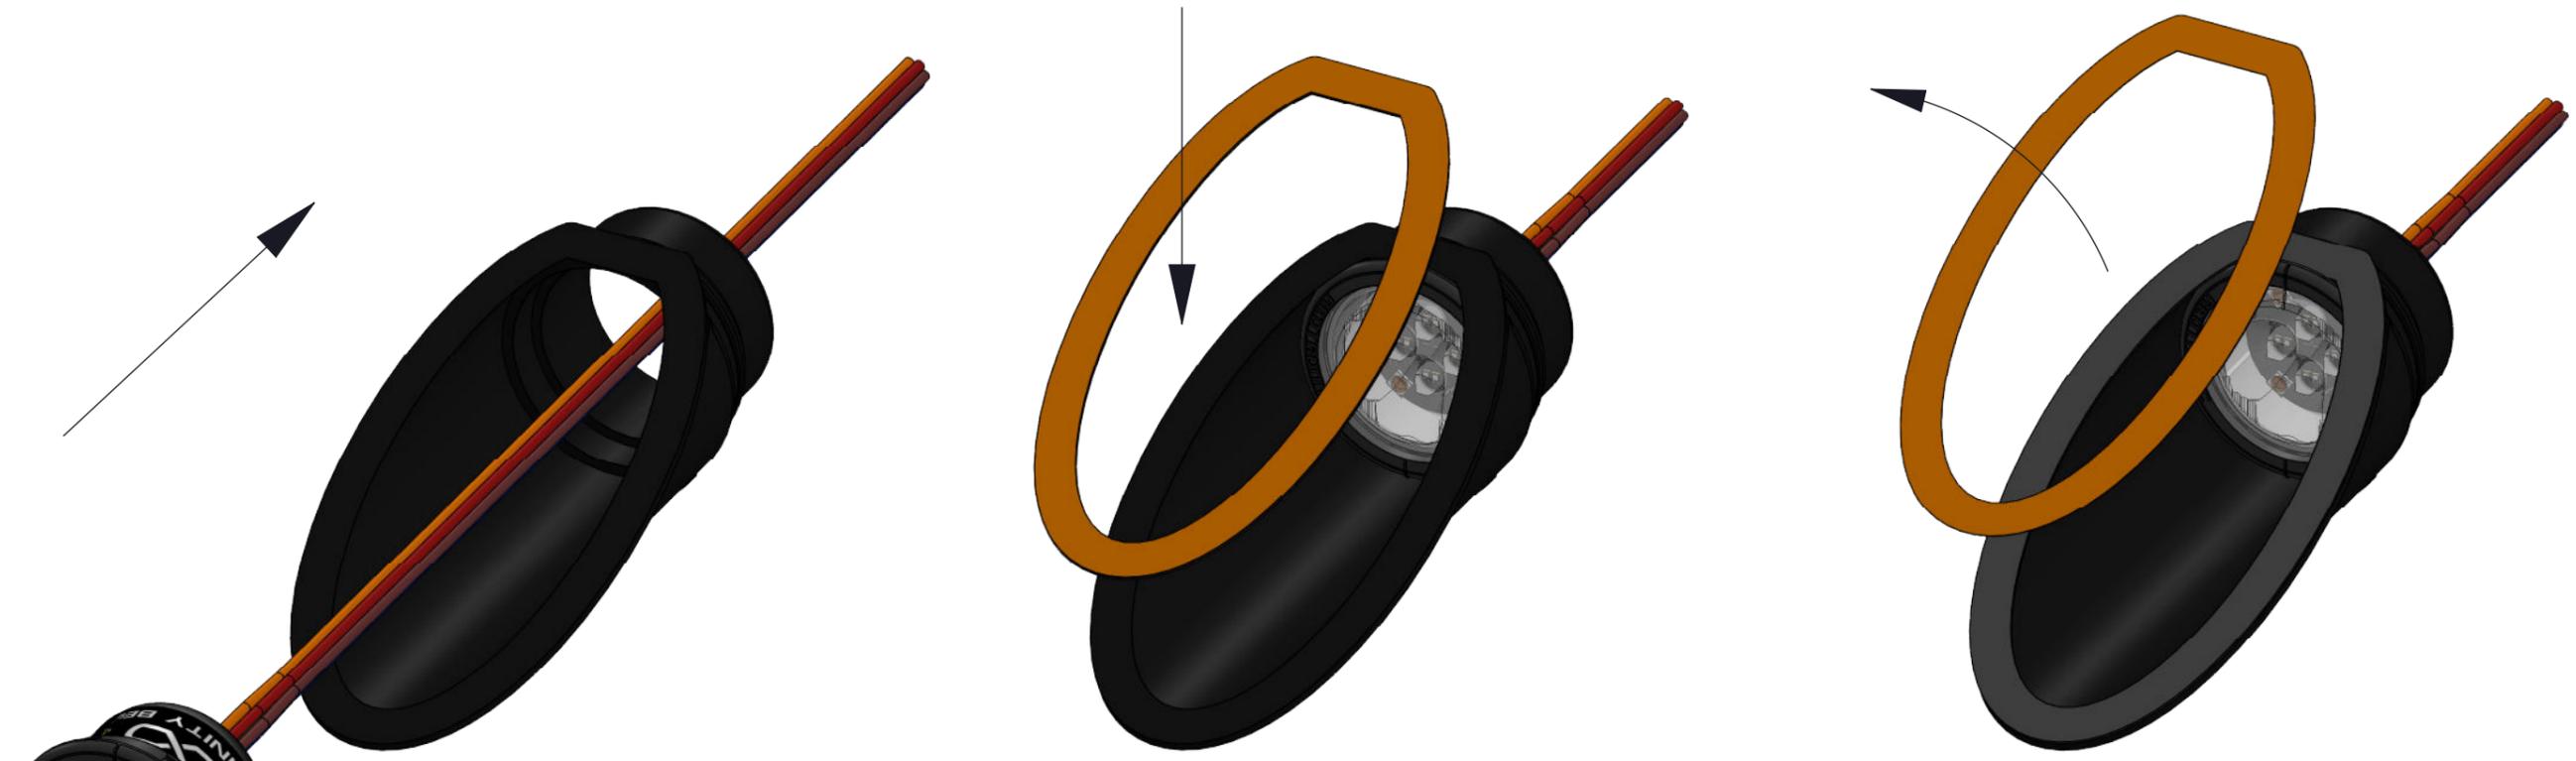



1. FEED BB4 CABLE THROUGH WINDOWPOD AND PUSH TO FIT IN PLACE USING DOUBLE POP-LOCK

2. APPLY ADHESIVE PAD TO BB4 WINDOWPOD ASSEMBLY

3. REMOVE PROTECTIVE COVER FROM ADHESIVE PAD

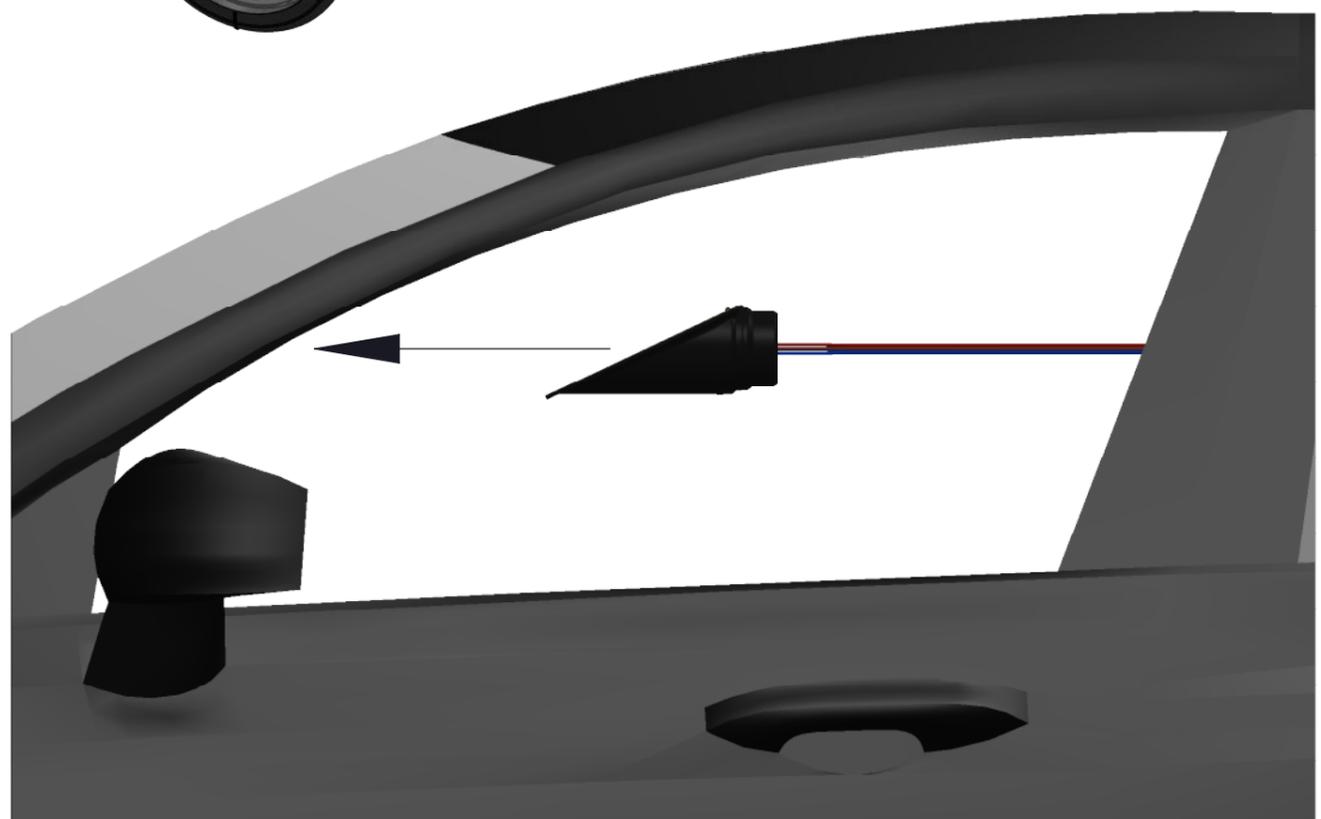

- 4. CLEAN ATTACHMENT POINT ON WINDSHIELD USING ALCOHOL WIPE PROVIDED
- 5. ALLOW 10 SECONDS TO DRY
- 6. IT IS RECOMMENDED THAT THE ATTACHMENT POINT IS WARMED USING APPROPRIATE EQUIPMENT (E.G. VEHICLE HVAC SYSTEM) FOR OPTIMAL ADHESION
- 7. FIRMLY APPLY BB4 WINDOWPOD TO WINDSHIELD

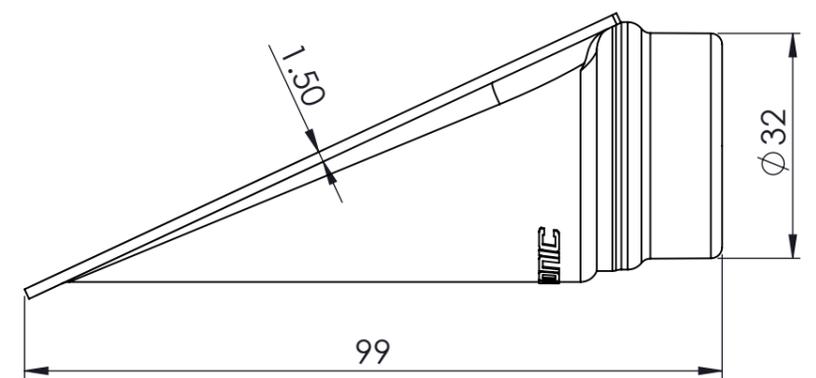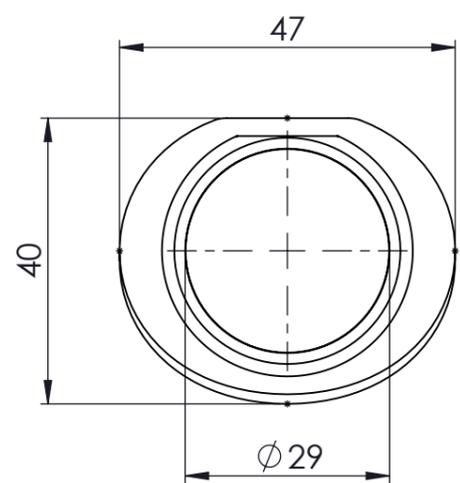

THIS DRAWING IS CONFIDENTIAL AND IS THE EXCLUSIVE PROPERTY OF REDTRONIC LTD.  
NO UNAUTHORISED USE, COPY OR DISCLOSURE OF THE DRAWING IS TO BE MADE AND IT IS TO BE RETURNED WHENEVER REQUIRED.

PROJECTION  
IF IN DOUBT ASK  
A3

SCALE N/A  
DrawnBy WJO  
DATE 23/09/2021  
WEIGHT -g

UNLESS STATED DIMENSIONS MM  
TOL. LINEAR  $\pm 0.3$   
TOL. DIAGONAL  $\pm 0.5$   
TOL. ANGULAR  $\pm 0.5$

MATERIAL AS PARTS  
FINISH -



Description  
BB4 WINDOWPOD INSTALLATION GUIDE  
SHEET. 1 OF 1 | DWG NO BB4-WPD-INST | REV A

8 7 6 5 4 3 2 1