





1. FEED BB4 CABLE THROUGH WINDOWPOD AND PUSH TO FIT IN PLACE USING DOUBLE POP-LOCK



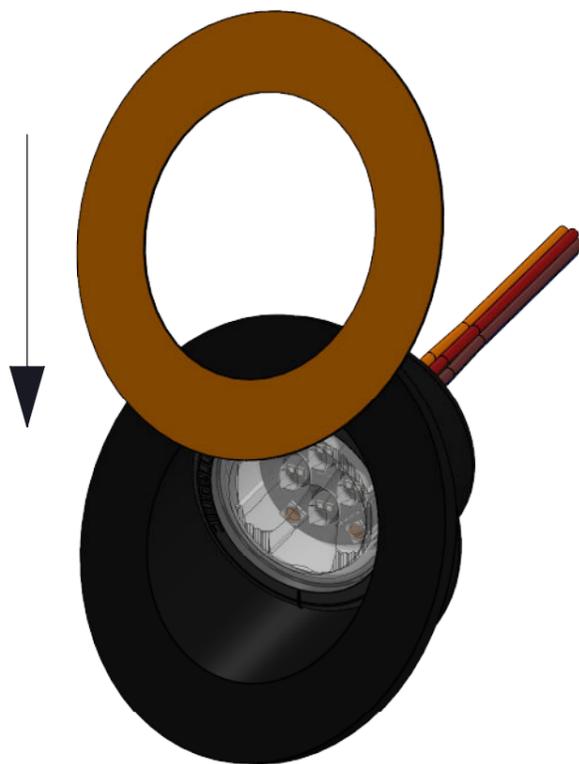


2. APPLY ADHESIVE PAD TO BB4 WINDOWPOD ASSEMBLY

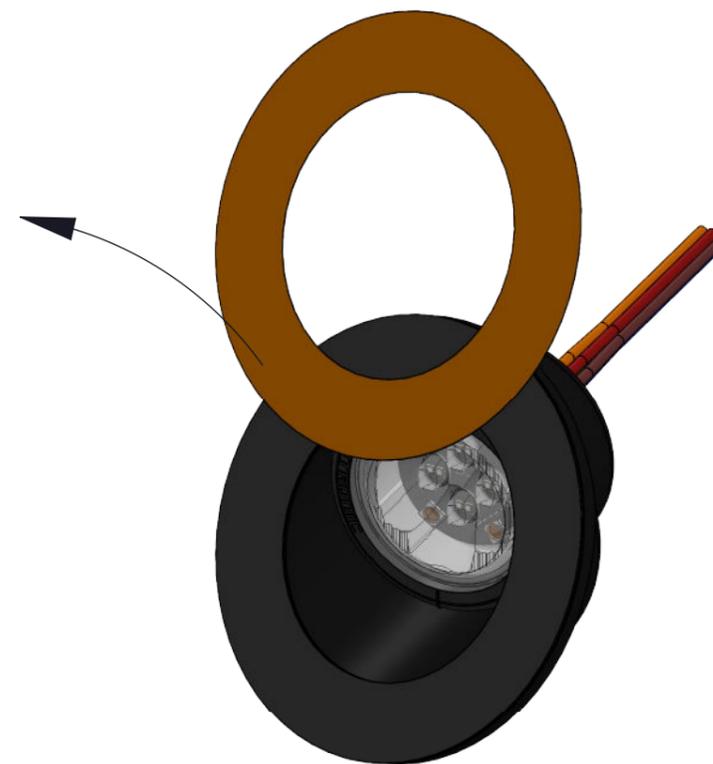

3. REMOVE PROTECTIVE COVER FROM ADHESIVE PAD

- 4. CLEAN ATTACHMENT POINT ON WINDOW USING ALCOHOL WIPE PROVIDED
- 5. ALLOW 10 SECONDS TO DRY
- 6. IT IS RECOMMENDED THAT THE ATTACHMENT POINT IS WARMED USING APPROPRIATE EQUIPMENT (E.G. VEHICLE HVAC SYSTEM) FOR OPTIMAL ADHESION
- 7. FIRMLY APPLY BB4 WINDOWPOD TO WINDOW

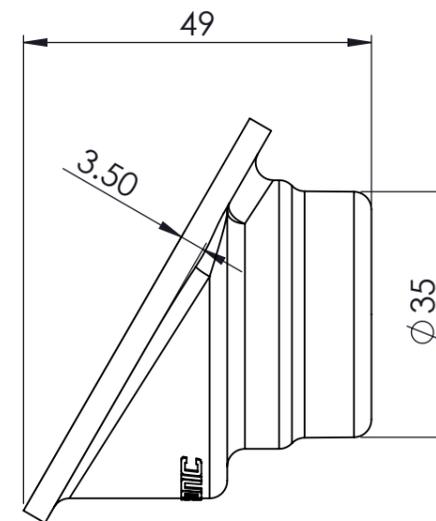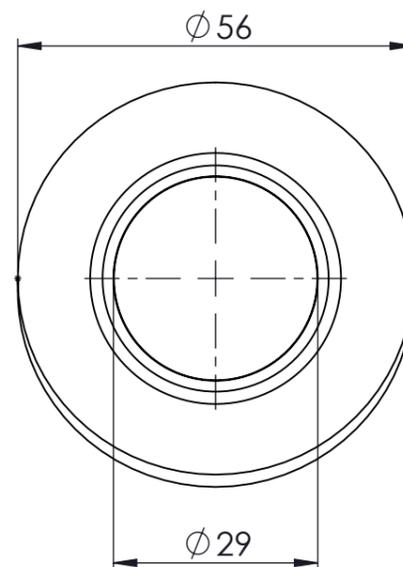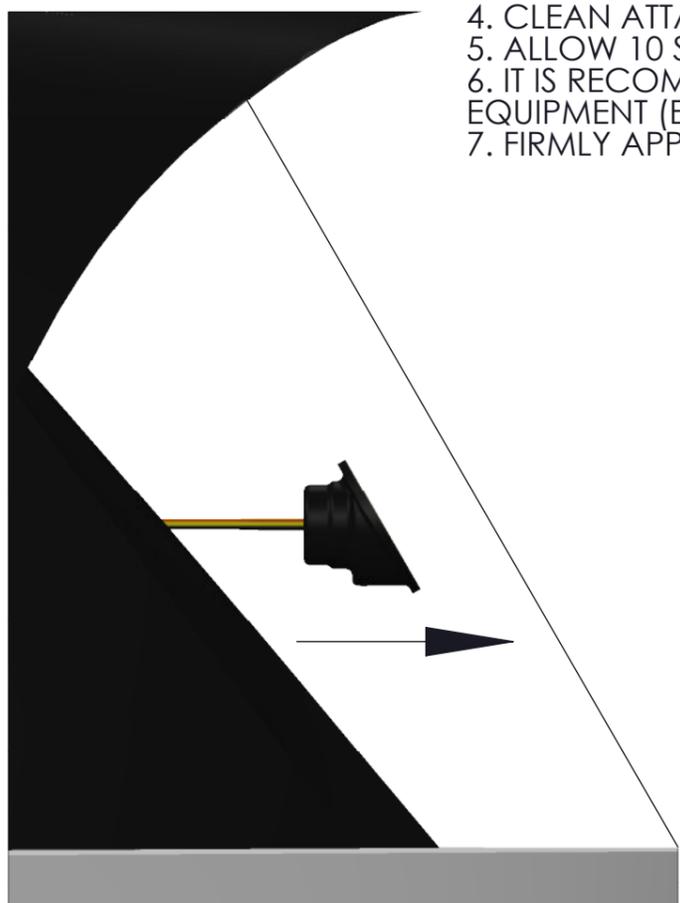

THIS DRAWING IS CONFIDENTIAL AND IS THE EXCLUSIVE PROPERTY OF REDTRONIC LTD.
NO UNAUTHORISED USE, COPY OR DISCLOSURE OF THE DRAWING IS TO BE MADE AND IT IS TO BE RETURNED WHENEVER REQUIRED.

PROJECTION 	SCALE	N/A
	DrawnBy	WJO
IF IN DOUBT ASK	DATE	23/09/2021
	WEIGHT	-g
A3		

UNLESS STATED	MATERIAL	AS PARTS
DIMENSIONS	FINISH	-
TOL. LINEAR		±0.3
TOL. DIAGONAL		±0.5
TOL. ANGULAR		±0.5

REDTRONIC
VEHICLE WARNING AND SAFETY SOLUTIONS

Description
BB4 WINDOWPOD INSTALLATION GUIDE

SHEET. 1 OF 1 | DWG NO BB4-WPD-INST | REV A